




304 MATERIAL

Parts Tables - Couplings

AISI 304

ACO Pipe - Accessories


Straight Couplings

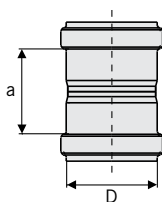

Part No AISI 304	Price \$	D in (mm)	a in (mm)	Weight lbs
98920	18.00	1.97 (50)	2.1 (54)	0.2
98922	26.00	2.95 (75)	3.0 (75)	0.4
98924	39.00	4.33 (110)	3.3 (84)	0.9
419813	58.00	4.92 (125)	5.5 (140)	0.9
98926	76.00	6.30 (160)	4.3 (110)	1.8
419431	114.00	7.87 (200)	5.4 (136)	4.0
417160	357.00	9.85 (250)	7.2 (181)	6.9
417225	650.00	12.41 (315)	7.1 (179)	11.5

Straight couplings are used to connect two male end pipe sections

Repair Couplings

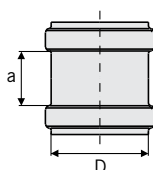


Part No AISI 304	Price \$	D in (mm)	a in (mm)	Weight lbs
98830	16.00	1.97 (50)	1.7 (44)	0.2
98832	23.00	2.95 (75)	1.8 (46)	0.4
98834	36.00	4.33 (110)	2.0 (52)	0.7
419772	56.00	4.92 (125)	2.8 (70)	0.7
98836	69.00	6.30 (160)	3.0 (76)	1.5
419435	105.00	7.87 (200)	3.9 (100)	3.3
417139	418.00	9.85 (250)	7.2 (182)	5.3
417220	567.00	12.41 (315)	7.1 (179)	10.9

Repair couplings are used to aid a convenient repair to a damaged in-situ pipe. Unlike the standard straight coupling, there is no central registration to limit the insertion depth of the pipe. The repair coupling slides completely over a pipe joint and simply re-positioned to bridge the required pipe joint.


Installation tip: mark the final position of the repair coupling on the installed pipe system to ensure the coupling seals are positioned symmetrically about the pipe joint.

Eccentric Increaser Coupling

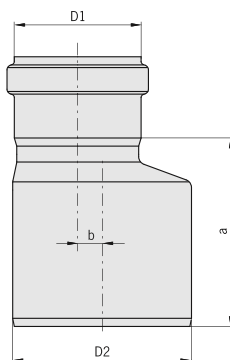

Part No AISI 304	Price \$	D1 in (mm)	D2 in (mm)	a in (mm)	b in (mm)	Weight lbs
417135	419.00	7.78 (200)	9.85 (250)	7.1 (180)	0.6 (15)	5.8
417218	612.00	9.85 (250)	12.41 (315)	7.5 (190)	0.6 (15)	9.8

Concentric Increaser Coupling

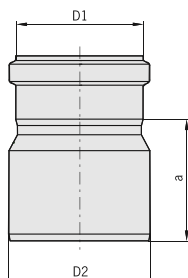

Part No AISI 304	Price \$	D1 in (mm)	D2 in (mm)	a in (mm)	Weight lbs
417113	419.00	7.78 (200)	9.85 (250)	7.1 (180)	5.8
417217	596.00	9.85 (250)	12.41 (315)	7.5 (190)	9.8